



Tel: +44 (0)1204 532544


Fax: +44 (0)1204 522285

www.compactinstruments.co.uk

CT6/LSR/ERP Additional instructions

When using the instrument with the LN1 short-range adaptor fitted it may be necessary depending on the application to adjust the sensitivity of the unit.

To alter the sensitivity, remove the black blanking plug located on top of the unit forward of the display. The sensitivity potentiometer can then be seen. Adjust as required, turning it clockwise increases the sensitivity.

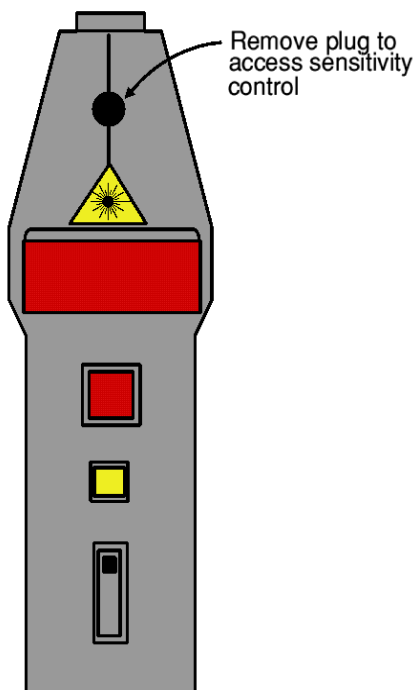

When using as an optical tachometer again it may be necessary to re-adjust the sensitivity

To Measure Speeds above 99,999 rpm, place the unit in the Metres/min range. The unit will then display the speed divided by 10 (i.e. 235,123 rpm will be displayed as 23312)

Pulse output connection 3.5mm stereo jack (Located on the side of the unit)

Body	0 volts
Tip	Pulse output (negative going)
Middle	Not used

Power on

The unit may be operated by means of either the Red Measure button or the On / Off slide switch situated at the rear of the instrument.

This slide is configured as below

