



Tel: +44 (0)1204 532544

Fax: +44 (0)1204 522285

www.compactinstruments.co.uk

CT6/OP/SW and CT6/LSR/OP/SW ADDITIONAL INSTRUCTIONS

Pulse output connection (Located on the side of the unit)


Body 0 volts

Tip:- Pulse output (Negative going) Middle Not used.

Power On

The unit may be operated by means of either the Red Measure button or the On / Off slide switch situated at the rear of the instrument.

This slide is configured as below

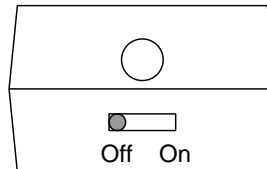

N.B

The On / Off switch mimics the Red Measure button. So, although the Light Beam will turn off as soon as the Switch is moved to the Off position, but the unit will only power down after the same delay as when the normal Measure button is used.

CAUTION

Ensure that connections made to the rear and side of the unit are made using a 3.5mm Stereo Jack Plug.