

HS-620 Compact and Portable Meter

Vibration output

Key Features

- Velocity & bearing condition
- Used to monitor vibrations without installing equipment
- Rechargeable battery used with mains or in-car charger
- Sensor/cable fault indicator
- Display hold function
- Choice of metric or imperial measurement



Product Description

The HS-620 portable Vibration Meter Kit has been designed for use as both an entry level and also a comprehensive vibration monitoring instrument for maintenance engineers across all types of industry.

The kit consists of the compact vibration meter, a hand held probe, a magnetic mount for more permanent installations, a protective carrying case, an instruction manual and battery chargers for both mains and in-car use.

The meter is microprocessor based and by selection of the controls can be easily set up to monitor acceleration (g) levels, velocity (in/sec), displacement (μm) and bearing condition (BG or BV). A display hold function is also included.

The unit, which conforms to ISO 2954 and ISO 10816-3 also has an automatic alarm check for bearing condition.

Operating from an internal re-chargeable Lithium battery, the meter offers 48 hours continuous operation. From flat, the unit can be recharged in 3 hours using either the mains or in-car charger supplied with the kit.

Because of its compact size, ease of use and battery operation, the HS-620 allows engineers to monitor vibration levels on important machinery anywhere around the factory.



www.hansfordsensors.com
sales@hansfordsensors.com

We reserve the right to alter the specification of this product without prior notice
TS089U.3



HS-620 Compact and Portable Meter

Vibration output

Technical Performance

Input	100 mV/g constant current accelerometer other inputs on request
Accelerometer	Hand held, supplied with 0.8 M cable
Vibration	Acceleration ... 0-50 g Peak Velocity ... 0-13.5 in/s RMS Displacement ... 0-4000 µm pk-pk Bearing Condition (BG) ... 0-18 g RMS Bearing Condition (BV) ... 0-1 in/s RMS
Accuracy	± 5%
Bearing	Acceleration ... 10 Hz to 12 kHz Velocity ... 10 Hz to 1 kHz Displacement ... 10 Hz to 1 kHz Bearing Condition (BG & V) ... 1 kHz to 12 kHz Automatic Alarm Check for Bearing Condition
Display	LCD
Hold Mode	Displays alarm status against ISO 2954 & ISO 10816-3

Environmental

Temperature Range (meter)	Operating ... 14 to 122°F Storage ... -4 to 140°F
Temperature Range (accel)	-4 to 194°F
Sealing	IP64 Dust tight and splash resistant
EMC	EN61326-1:2013


Electrical

Power	Lithium rechargeable battery 3.6 Volts, 1700 mA hours 48 hours continuous operation Auto switch-off after 3 minutes
Battery Charge	3 hrs from flat, supplied with meter, charger & car charger

Mechanical

Case Material	Plastic
Dimensions	4.5 x 2.8 x 1 in
Weight	Meter - 5.6 oz. Accelerometer (incl cable) - 8in
Magnetic Base	26.5 lbs pull strength
Spike	2.8in

How To Order

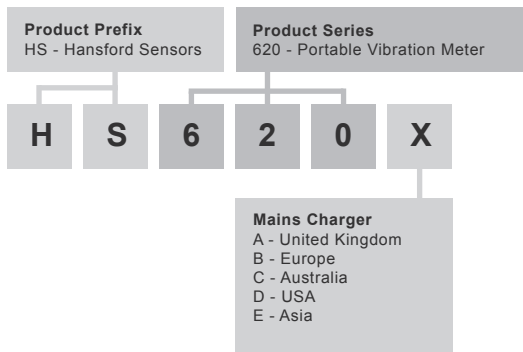

Accessories	
Hand-Held Probe	(HS-6201005501)
Magnetic Mount	(¼-28" UNF Male)
Stainless Steel Vibration Spike 3 in.	(HS-AS054-075)
2.6 ft. Cable with BNC & TNC Connectors	(AC-095)
In-Car Battery Charger	(HS-AA032)
Mains Battery Charger	(HS-AA033)
Carry Case	(HS-AA034)
Replacement Battery	(HS-AA035)



www.hansfordsensors.com
sales@hansfordsensors.com

We reserve the right to alter the specification of this product without prior notice
TS089U.3

